

TTA User Manual

Convertible basement



Cellphone mount



Wahoo mount




Polar mount



Bryton mount

Bracket installation diagram

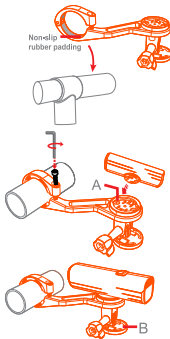

- ◇ For 35.0 mm handlebars: Install the TTA out-front mount directly, with no rubber shim needed.
- ◇ For 31.8 mm handlebars: Install the TTA out-front mount using the thin rubber shim as required.

1. Use the hex key to remove the screw from the handlebar connector. Place the rubber pad around the handlebar.

2. Place the handlebar connector around the rubber pad. Tighten the screw (maximum torque 2.1Nm) after adjusting for positioning.

3. Place product on the top of bike mount notch and rotate 90 degrees.

4. Place product on the bottom of bike mount notch and rotate 90 degrees, adjust for angle and positioning then tighten the screw rod.